

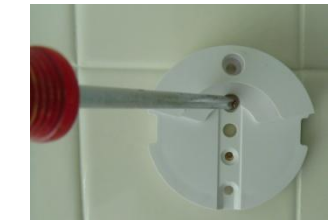


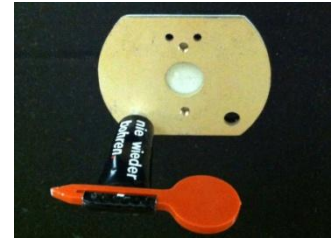

# Installation using “No Drilling Required” Adapters

**CLEAN SURFACE WITH SUPPLIED CLEANING CLOTH. LET FULLY DRY BEFORE INSTALLATION. DO NOT USE HOUSEHOLD CLEANERS. WIPE ANY RESIDUE WITH CLEAN DRY CLOTH**

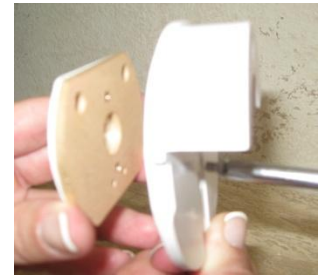

## **Step 1: Attaching Wall Mounts to Adapters**

Using screws included in the adapter packet, attach Wall Mounts to Adapters.

## **Step 2: Positioning Wall Mounts**

•Center the Wall Mount (attached to Adapter) over the tub’s edge with the closed end toward the ceiling. Place the center of the Wall Mount at desired height (approx. 73-75 inches from the floor.)

**Please Note:** The standard length of a shower Curtain is 72 inches. Where the bottom of your shower curtain falls will be determined by the height you install the wall mounts. Too low and the curtain may hit the floor, too high and the curtain may seem short.

•Mark the center hole position on the wall, use masking tape to avoid marking surface.

## **Step 3: Detach the Adapters from the Wall Mount**

Unscrew the Wall Mounts from the Adapters

## **Step 4: Positioning the Adapters**

•Peel protective cover border and carefully press in place aligning the center hole you marked with the center hole in the Adapter. Ensure that the flat edges are parallel to the floor.

•Pierce tube with red key, use key on tube end as pictured. Insert the adhesive into the large hole until it is visible on the check (vent) hole. Repeat this process on the other large hole. Once the adapter is filled, do not press or disturb the adapter for 12 hours. Excess adhesive can easily be cleaned after curing.

## **Step 5: Attaching Wall Mounts**

•Using screws included in the adapter packet, one again attach Wall Mounts to Adapters.

## **Step 6: Snapping the Rod in Place**

•Once the Wall Mounts are in position, take the pre-assembled Rotator Rod out of the box, Remove the plastic on one end and slide the Cap and Ball out of the way.

•Snap the Pivot Cam (circular disk) into place by firmly sliding it’s center point up the groove on the Wall Mount until it ‘clicks’ into place. Be sure the arrow on the Pivot Cam points down while snapping into place.

•Repeat on the other side.

**EASY TIP** The ends of the rod slide in and out of the rod on either side so you can adjust the length of the Rotator Rod to fit your bathroom walls.



**no drilling required.**

**RotatorRod.com – For Support call (941) 706-2272**

# Installation using “No Drilling Required” Adapters (cont.)

## **Step 7: Securing the Ball and Cap:**

### **Rotator Balls**

- Slide each Rotator Ball to the end of the rod so that the arrow on the Cam points to the clear nylon set screw in the Ball--toward the **inside curve** of the rod. The Pin Grooves (in the Ball) will slide over the Rod Pins. Tighten the clear nylon Set Screw in the top of the Ball using a small flat-head screwdriver

### **Caps**

- Finally, slide each Cap over its end of the rod against the wall and twist until it locks into the Wall Mount .

## **Step 8: Hang the Rod Reacher and you're done!!**

The enclosed Rod Reacher provides an easy reach for smooth rod rotation. It can also be used to open or close the shower curtain. Attach it by lifting it up to the shower rod and placing the rod between the open space of the hooks. Simply twist the Rod Reacher and let it hang securely from shower rod. It is now ready to use.



## Taking the Rod Down

### **Step 1: Taking the Rod Down**

- Insert a regular screw driver between the Wall Mount and the Cam Pivot. Simply twist the screwdriver away from the Wall Mount
- When done properly the Cam Pivot will pop easily out of the Wall Mount.

### **Step 2: Removing the Wall Mounts**

- Unscrew the Wall Mounts from the adapters.

### **Step 3: Removing the Adapters**

*The nie wieder bohren adapter system can be moved from any hard surface by applying torsion*

- Use channel locks and firmly turn the adapter applying consistent pressure.
- Remove residual adhesive from surface using a razor knife and wipe with acetone removed as needed. For rough surfaces, a coarse brush can also be used. When using a coarse brush, please wear protective goggles to protect your eyes.

